

Flying Tiger 10 Tuning Guide

Our Base settings are at 8 to 11 knots of wind, tensions measured with a LOOS PT-2 Gauge.
Basic setup:

Mast Base: Max Forward

Mast Rake: 49.6' to top of transom intersection

J Measurement: 11.6'

Pre-Bend: 3.5"

Wind Speed True	V1	D1	D2
0-7	-3	-2	-1
8-11 - Base	36	33	28
12-16	+2	+2	+1
17 plus	+4	+4	+2

V1 - Cap Shrouds

D1 - Lower Diagonal

D2 - Upper Diagonal